

Installation Guide of Forklift Anti-collision Auxiliary Equipment (UTAG-SL90F)

1. Installation Guide


UWB Audible LED Beacon-Forklift (UTAG-SL90F)

Power input range: DC8V ~ 55V

(⚠ Exceeding input voltage limits may cause damage to the equipment)

2. User Guide

- You will find an UWB audible LED beacon, waterproofing power extension cord and mounting bracket inside the box.
- First, secure the mounting bracket at the selected area/surface then mount the beacon on top of the secure bracket.
- This product will be power supplied directly from the vehicle (Forklift)
- If a warning light is already installed on the vehicle, this product can be powered using the exact same power source.
- This product has a reverse polarity protection circuit.

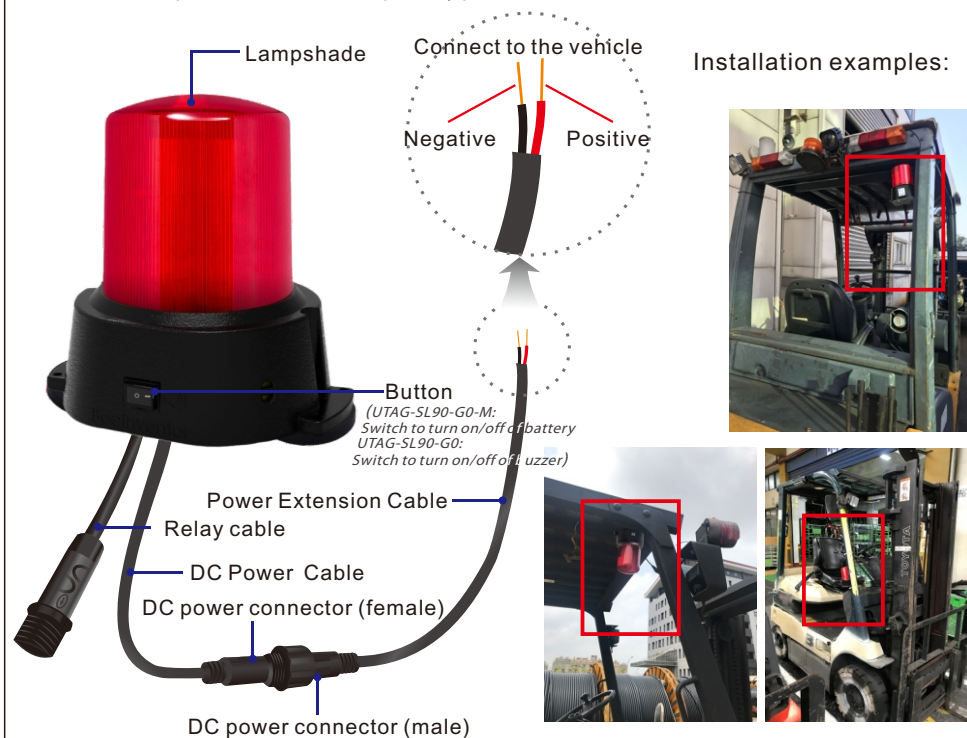

Installation Guide of Forklift Anti-collision Auxiliary Equipment (UTAG-SL90F)

1. Installation Guide


UWB Audible LED Beacon-Forklift (UTAG-SL90F)

Power input range: DC8V ~ 55V

(⚠ Exceeding input voltage limits may cause damage to the equipment)

2. User Guide

- You will find an UWB audible LED beacon, waterproofing power extension cord and mounting bracket inside the box.
- First, secure the mounting bracket at the selected area/surface then mount the beacon on top of the secure bracket.
- This product will be power supplied directly from the vehicle (Forklift)
- If a warning light is already installed on the vehicle, this product can be powered using the exact same power source.
- This product has a reverse polarity protection circuit.

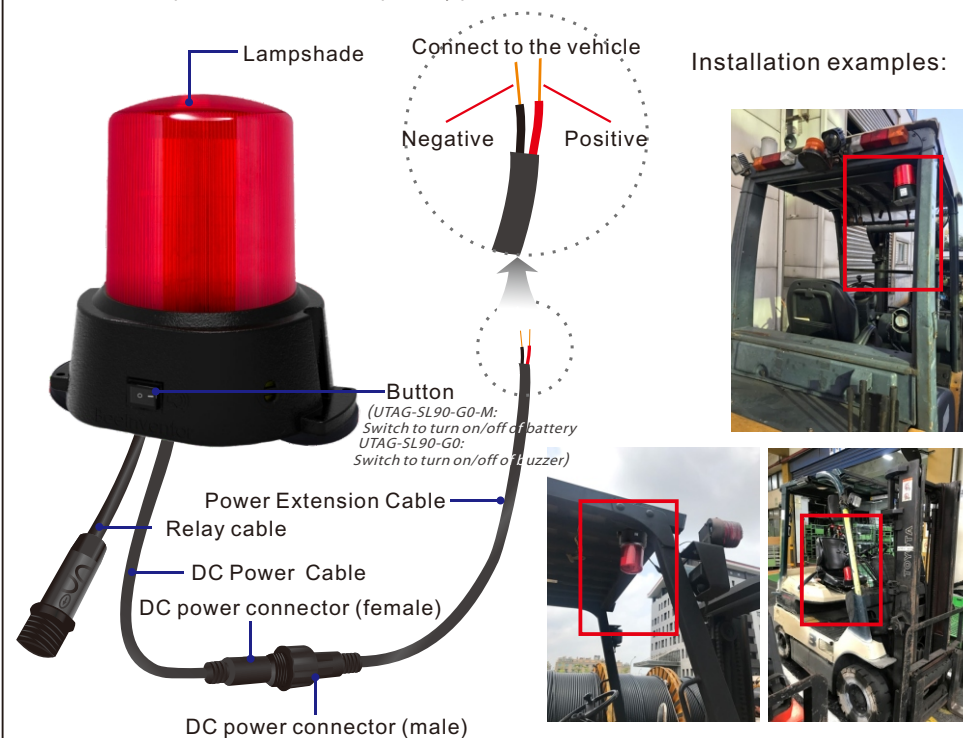

Installation Guide of Forklift Anti-collision Auxiliary Equipment (UTAG-SL90)

1. Installation Guide

UWB Audible LED Beacon-Fixed (UTAG-SL90)

Power Input range: DC12V

(⚠ Exceeding input voltage limits may cause damage to the equipment)

2. User Guide

- You will find an UWB audible LED beacon, 12V/2A power supply adapter and mounting bracket inside the box.
- First, secure the mounting bracket at the selected area/surface then mount the beacon on top of the secure bracket.
- This product is designed to use with a 110~220V power outlet, please ensure a stable power supply is maintained at all time.

Installation examples:



Installation Guide of Forklift Anti-collision Auxiliary Equipment (UTAG-SL90)

1. Installation Guide

UWB Audible LED Beacon-Fixed (UTAG-SL90)

Power Input range: DC12V

(⚠ Exceeding input voltage limits may cause damage to the equipment)

2. User Guide

- You will find an UWB audible LED beacon, 12V/2A power supply adapter and mounting bracket inside the box.
- First, secure the mounting bracket at the selected area/surface then mount the beacon on top of the secure bracket.
- This product is designed to use with a 110~220V power outlet, please ensure a stable power supply is maintained at all time.

Installation examples:

